



## 701B PGM Men Display Form

### Assembling Guide

**You should have the following:**

- (1) BASE**
- (2) POLE**
- (3) MEN'S DISPLAY FORM**



(2)



(3)






### **Step 1**

Plant *BASE* firmly on the ground.

**Step 2**  
Insert *POLE* into the *BASE*.

\* Make sure to twist the screw tightly after *POLE* is inserted into the *BASE* completely.

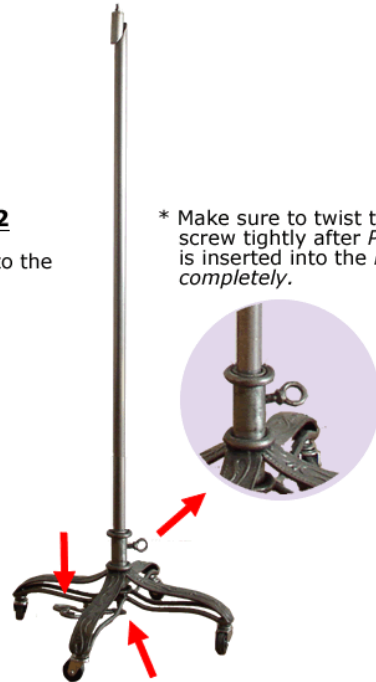

\* Make sure to have *POLE* standing on the end of the foot pedal.

### **Step 4**

You may also slide *MEN's DISPLAY FORM* over the *POLE* from the leg.

\*When you are sliding *MEN's DISPLAY FORM* over the *POLE*, make sure you are stepping down on the foot pedal with the top of *POLE* closed (see accompanied picture).



Now, you have your *MEN's DISPLAY FORM* Combination completely installed.

### **Step 3**

Slide the *MEN's DISPLAY FORM* over the *POLE*.

\*When you are sliding *MEN's DISPLAY FORM* over the *POLE*, make sure you are stepping down on the foot pedal with the top of *POLE* closed (see accompanied picture).



Now, you have your *MEN's DISPLAY FORM* Combination completely installed.